ISO9001 Certified

ASCON spa
20021 Baranzate (Italy)
Fax +39 02 350 4243
www.ascon.it
sales@ascon.it

E

mod. IO-LB/MP-D2/08-08


M.I. IO-LB/MP-D2/08-08 - 0/09.05
Cod. J30-658-1AD2 08 08 E

Installation Manual

Contents
- General description
- Accessories
- Installation
- Electrical connections
- Electric safety


8 Digital Inputs and 8 Relay Outputs for the microPAC systems mod. IO/MP-D2/08-08

σ2 SERIES

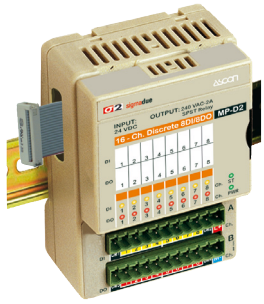

This I/O module is connected to the microPAC CPU through a dedicated bus and expands the sytem by:
- 8, 24 Vdc Digital Inputs;
- 8, 2A NO Relay Outputs.


General description

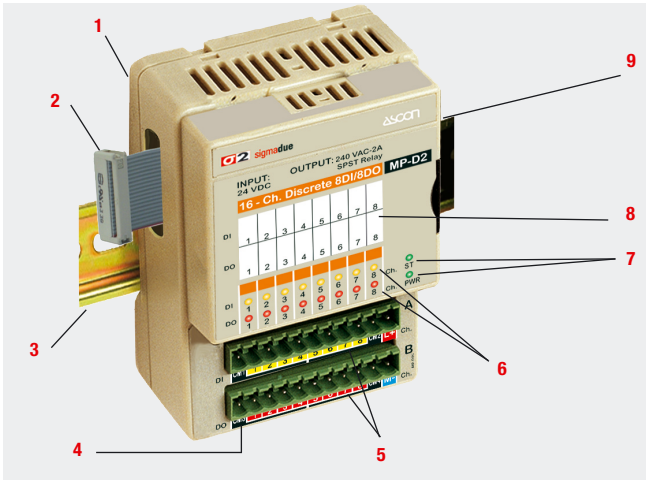

1 - Model identification label (on the back side of the module);
2 - Bus to connect the CPU or the previous external I/O module;
3 - DIN RAIL 35 x 7.5 (EN50022);
4 - Slides to install an additional terminal block 2 x 11 poles (accessory);
5 - Male 11 poles plugs (**A** and **B**), pitch 5.0mm; the female 11 poles plugs have fast snap-ON connectors with screw or spring terminals to connect the power supply, the 8 digital Inputs and the 8 digital Outputs;
6 - I/Os status LEDs: 1...8 yellow LEDs, status of the 8 digital Inputs; 1...8 red LEDs, status of the 8 digital Outputs;
7 - Status green LEDs: **ST**: module status, **PWR**: power supply ON;
8 - Removable and writable label to identify the connected I/O (TAG number);
9 - Bus to connect the external I/O modules;

Installation

Dimensions (mm)

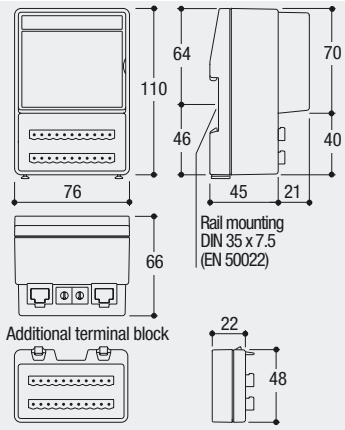


Operating conditions

Environmental condition		Suggestion
Operating conditions	°C Temperature 0...+50°C	
	%Rh Umidity 5...95% Rh non condensing	
Special conditions	°C Temperature > 50°C	Use forced ventilation
	%Rh > 95% RH	Warm up
	Conducting atmosphere	Use filter
Forbidden conditions	Corrosive atmosphere	
	Explosive atmosphere	

Mounting position

- Mount the module vertically;
- In order to help the ventilation flow of air, respect the distances between modules and walls or other modules.


Mounting position (mm)

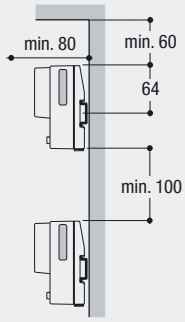


Mounting/removing the modules on/from the DIN rail

1 Close the spring slide, then clip the upper part of the module on the rail;
2 Rotate the module downwards till to the click;
3 Switch OFF the Power Supply
Lower the spring slide by inserting a flat-blade screwdriver as indicated;
4 Turn and lift the module upwards.

Mounting the module

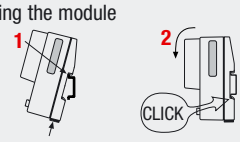


Removing the module

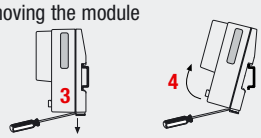

Accessories

11 poles connectors
With screw terminals: AP-S2/SPINA-V11
With spring terminals: AP-S2/SPINA-M11



Additional terminal block
AP-S2/TB-211-1



Power supply 45W - 2A/24 Vdc
AP-S2/AL-DR45-24



Power supply 120W - 5A/24Vdc
AP-S2/AL-DR120-24



Connecting the expansion modules


The I/O module are already set.
The I/O expansion modules must be mounted on the right of the last mounted module.
The maximum system configuration is: microPAC CPU + 2 expansion modules.
The modules (CPU included) must be powered OFF when connected to each other.
All the modules must be removed from the DIN rail before to connect or disconnect the expansion modules.

1 Switch OFF the Power Supply;
2 Insert the connector of the bus in the rightmost module. A position key identifies the insertion versus of the connector;
3 Mount the modules on the DIN rail.

To remove the I/O expansion modules invert the mounting sequence described.

Electrical connections

Terminals connections and plugs

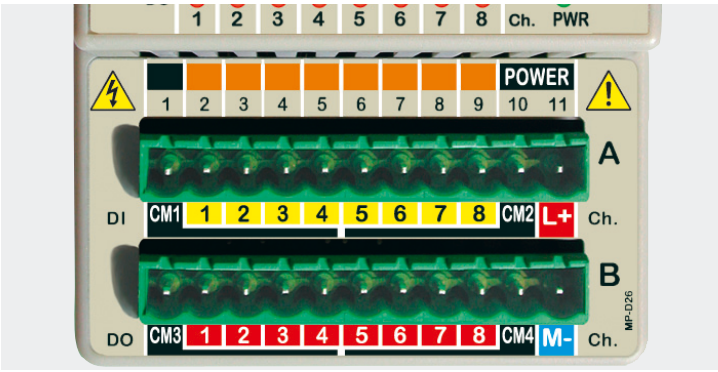

Pin	Label	Signals
A1	CM1	Not connected
A2...A9	1...8	8 digital inputs (+ pole)
A10	CM2	Not connected
A11	L+	+24V power supply terminal

Pin	Label	Signals
B1	CM3	Common pole for outputs B1...B4
B2...B9	1...8	8 digital outputs (+ pole)
B10	CM4	Common pole for outputs B5...B8
B11	M-	0V power supply terminal

Description	Plugs **A**, **B** terminals
Flexible cable section:	0.2...2.5 mm² (AWG24...AWG12)
Stripped wire	**Screw:** 7mm; **Spring:** 10mm
Flat blade screwdriver	0.6 x 3.5 mm
Tightening torque	0.5...0.6 Nm


Technical data:
- Two 11 poles plugs (**A**, **B**) pitch 5.0mm
- Made with self extinguishing material as required by UL94 V0 standard
- Overvoltage cathegory/pollution degree II/2
- Max. load current/section 8A/2.5mm² at 65°C
- Test pulse voltage: 4 kVp

⚠ Please note that the maximum current capacity for each terminal is 8A

⚠ Make sure that the overall current absorption (modules and field devices) matches the power supply

⚠ In order to avoid excessive voltage drops, install the most power consuming modules closer to the power supply.


Power supply

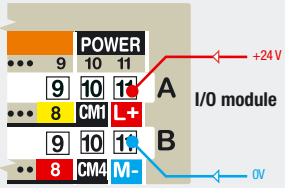

⚠ The module does not need to be powered as its electronics are powered by the local bus. The 24Vdc power supply (to be connected at **L+** and **M-** terminals) is necessary to power the Input/Output section.

- 24Vdc (–15...+25%), 5W max.


Additional terminal block TB-211-1

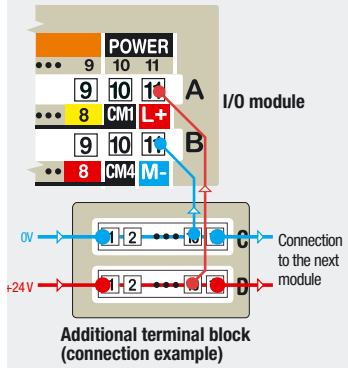

Additional terminal block (connection example)

- An additional terminal block can be installed on the I/O module using the two slides located in the lower part of the case.
- The additional terminal block has no active components inside, only two 11 pitch 5.0mm contacts connectors.
- All the 11 contacts of each connector (**C** and **D**) are internally connected and can be used to make multiple connections (see the example).

Relay Outputs 1...8

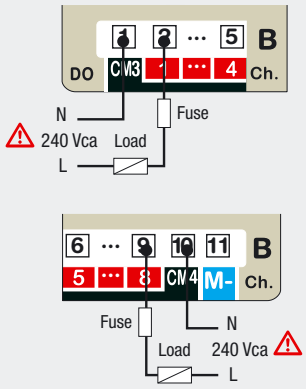


⚠ Relays rating: 2A at 120/240 Vac.

⚠ Terminal B1 (CM3) is the common terminal of relay outputs 1...4 (at terminals B2...B4); terminal B10 (CM4) is the common terminal of relay outputs 5...8 (at terminals B6...B9).

- Protect loads with fast type fuses.

24 Vdc Digital Inputs 1...8 Type II (EN61131-2)

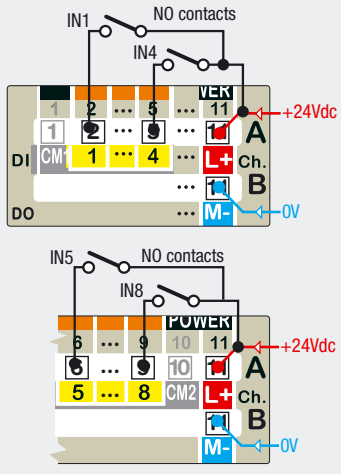

⚠ Terminal A11 is the +24Vdc power supply terminal for the inputs. The input circuits are closed on the B11 which is the common (0V) terminal of all the inputs.

⚠ Respect the polarity shown.

CE Electric safety and electromagnetic compatibility

Class II instrument, rear panel mounting.
This instrument has been designed in compliance with:
Regulations on electrical equipment:
according to regulations on the essential protection requirements in electrical equipment EN 61010-1
Regulations on Electromagnetic Compatibility according to:
- Regulations on RF emissions: EN61000-6-4 industrial environments;
- Regulation on RF immunity: EN61000-6-2 industrial equipment and system.

It is important to understand that it's responsibility of the installer to ensure the compliance of the regulations on safety requirements and EMC.
This controller has no user serviceable parts and requires special equipments and specialised engineers to be repaired. For this purpose, the manufacturer provides technical assistance and the repair service for its Customers. Please, contact your nearest Agent for further information.
All the information and warnings about safety and electromagnetic compatibility are marked with the ⚠ CE sign, at the side of the note.

Before installing the module read the following instructions

Precautions ⚠ CE

All wirings must comply with the local regulations.
- The supply wiring should be routed away from the power cables;
- Avoid to use electromagnetic contactors, power relays and high power motors nearby;
- Avoid power units nearby, especially if controlled in phase angle;
- Keep the low level sensor input wires away from the power lines and the output cables. If this is not achievable, use shielded cables on the sensor input, with the shield connected to earth.

Notes

1 Make sure that the power supply voltage is the same indicated on the instrument label;
2 Switch ON the power supply only after all the electrical connections have been completed.